

HA3 HOST® Applicator Parts List

| Code No. | Part No. | Description |
|----------|----------|---|
| 1 | L8003 | Handgrip |
| 2 | L8000 | Handle Assembly |
| 3 | L8004 | Crossbar Weldment |
| 4 | H1021 | End Cap (3 required) |
| 5 | L8008 | Hole Cover Assembly (3 required) |
| 6 | L8017 | Applicator Drum |
| 7 | L8020 | Axle Shaft |
| 8 | L8013 | Fill Port Cover Assembly <i>(Includes Code Nos. 15, 16, 17, 18, 20 & 21)</i> |
| 9 | L8012 | Screw Knob (6 required) |
| 10 | L8026 | Screw $\frac{1}{4}$ -20 x $1\frac{1}{2}$ " (2 required) |
| 11 | L8027 | Screw $\frac{1}{4}$ -20 x $1\frac{1}{7}$ " (6 required) |
| 12 | L8028 | Spacer Bar |
| 13 | X120 | O-Ring (2 required) |
| 14 | L8032 | Screw (2 required) |
| 15 | F2519A | Retainer Washer (2 required) |
| 16 | W529 | Washer (2 required) |
| 17 | L8030 | Screw Knob (2 required) |
| 18 | L8031 | Vinyl Cap (2 required) |
| 19 | L8033 | Axle Shaft-Short |
| 20 | L5003 | Washer (4 required) |
| 21 | L8016 | Fill Port Cover Gasket |

